3.Exploded Views and Parts List

3-1 Cassette Deck Exploded View and Parts List

3-1-1 AUTO STOP(OPTION)

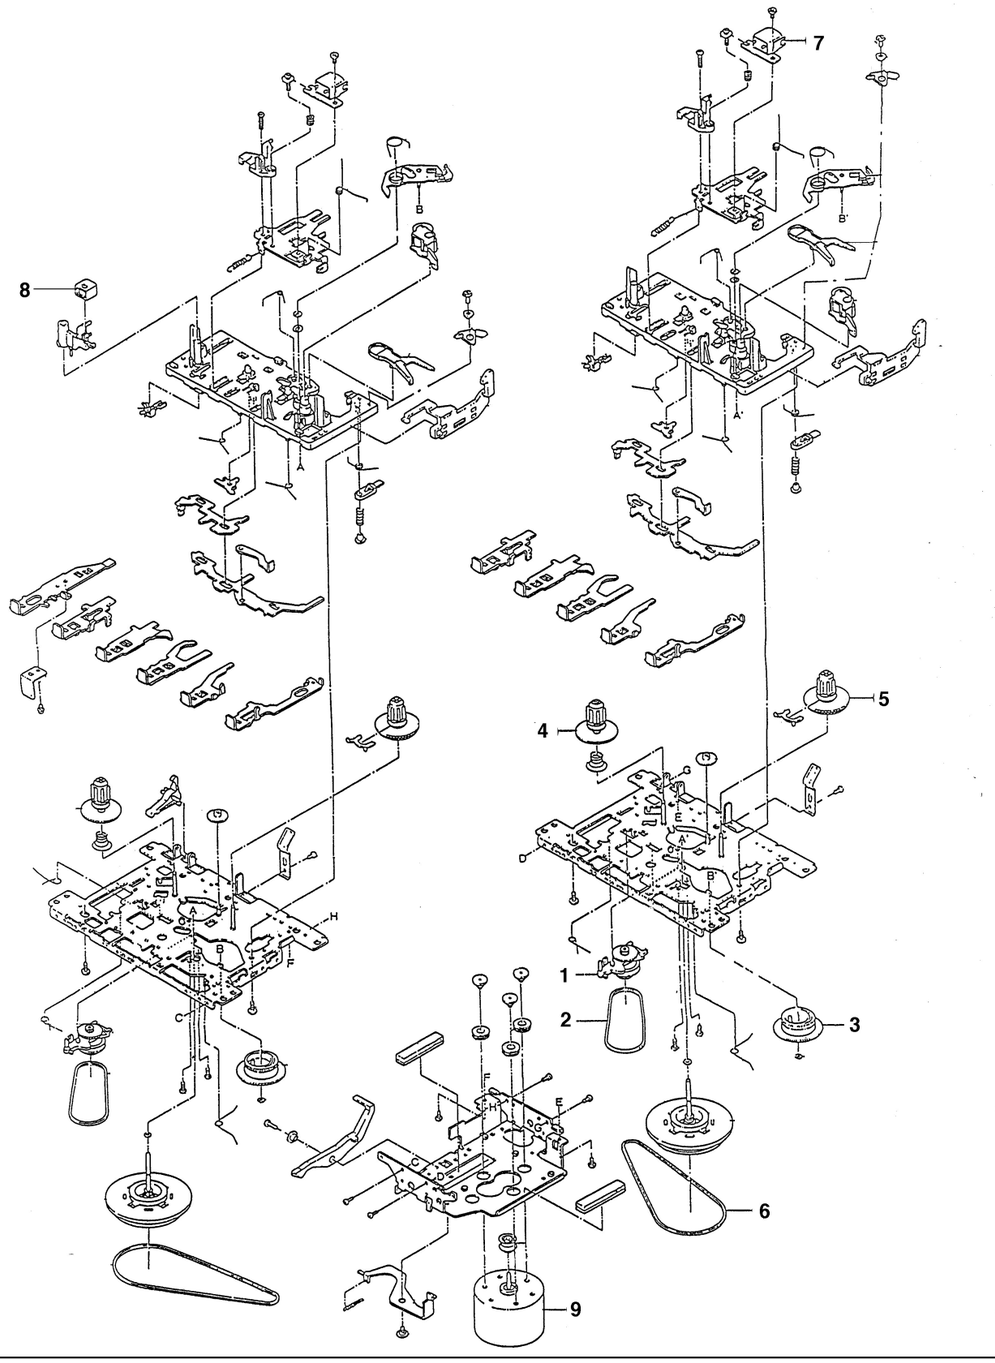

No.	Code No.	Description	Specification	Remarks
	AH59-20005X	DECK-CASSETTE	YN21ZSW-77	
1	AH81-11037D	R.F PULLEY ASS'Y	8521-200090-300	
2	AH81-11154D	BELT SUB	6600-090014-001	
3	AH81-11037H	CAM GEAR	6021-200802-001	
4	AH81-11037J	S REEL ASS'Y	8521-200080-300	
5	AH81-11037K	T REEL ASS'Y	8521-200070-300	
6	AH81-11154E	BELT MAIN	6600-090020-001	
7	AH81-11150W	R/P HEAD	TC-951	
8	AH81-11150X	ERASE HEAD	TC-230AN	
9	AH81-11037Q	MOTOR	EG530YD2BH	

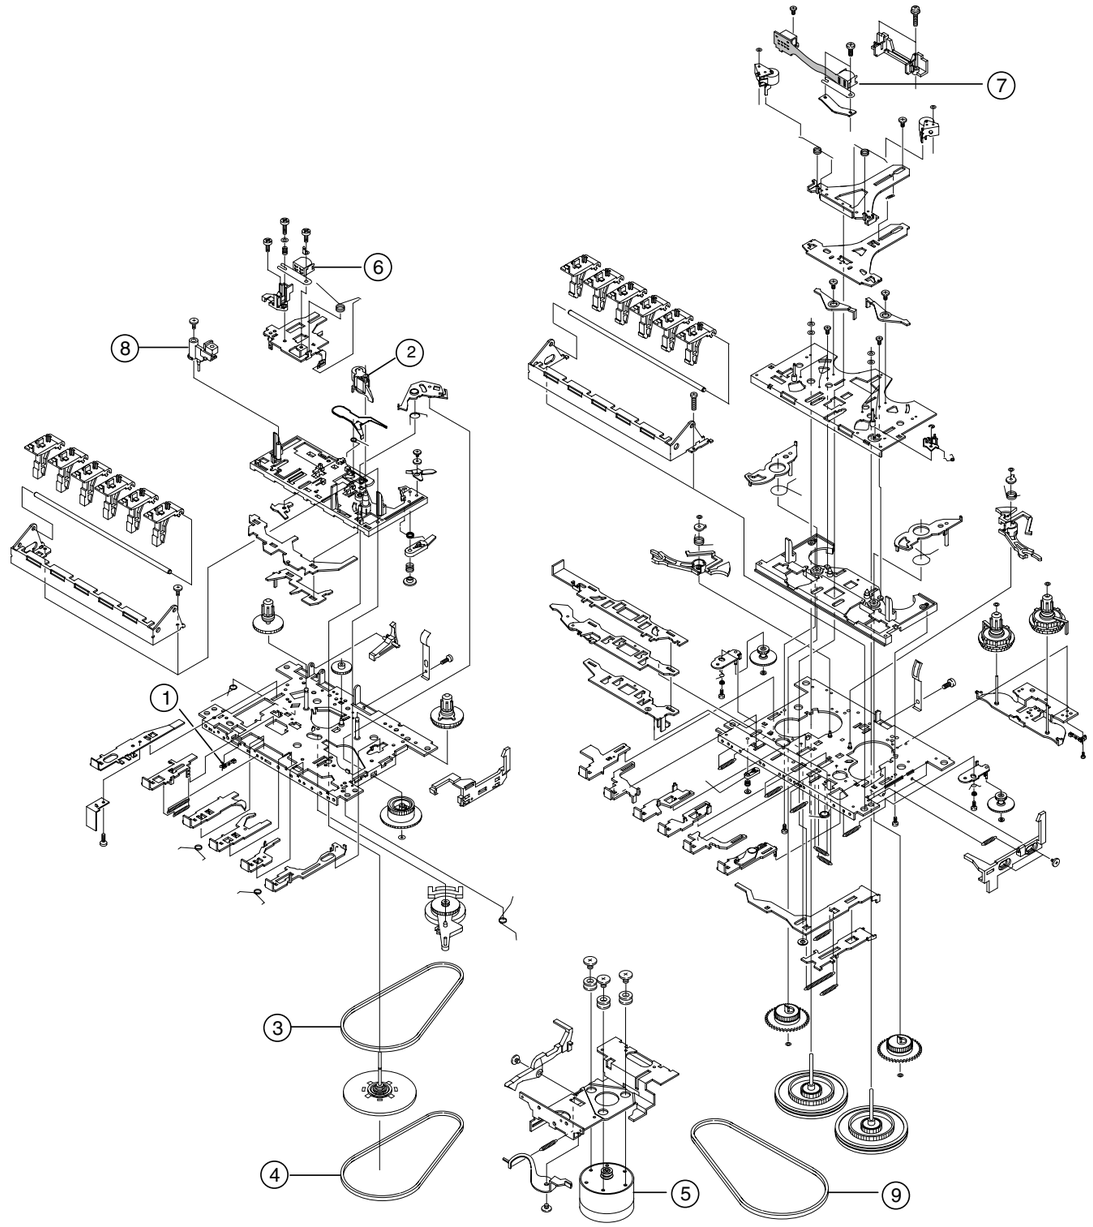

No.	Code No.	Description	Specification	Remarks
	AH59-20006V	TAPE DECK ASS'Y	YN921ZSW-50	
1	AH81-10005W	LEAF SWITCH	MSW-1541T	
2	AH81-10005Z	PINCH ROLLER ARM ASS'Y	1921-04-301	
3	AH81-10006C	RF BLET	1921-07-03	
4	AH81-10006R	MAIN BELT	1821-12-173	
5	AH81-11037Q	MOTOR	EG530YD2B	
6	AH81-10022E	R/P HEAD	MS15R-AA2N1	
7	AH81-10022H	P/B HEAD	MR359-KF243	
8	AH81-10022T	E-HEAD	PHK380-MS16A	
9	AH81-10023W	MAIN BELT	1821-17-03	

3-2 Main Exploded View and Parts List

3-2-1 Exploded View

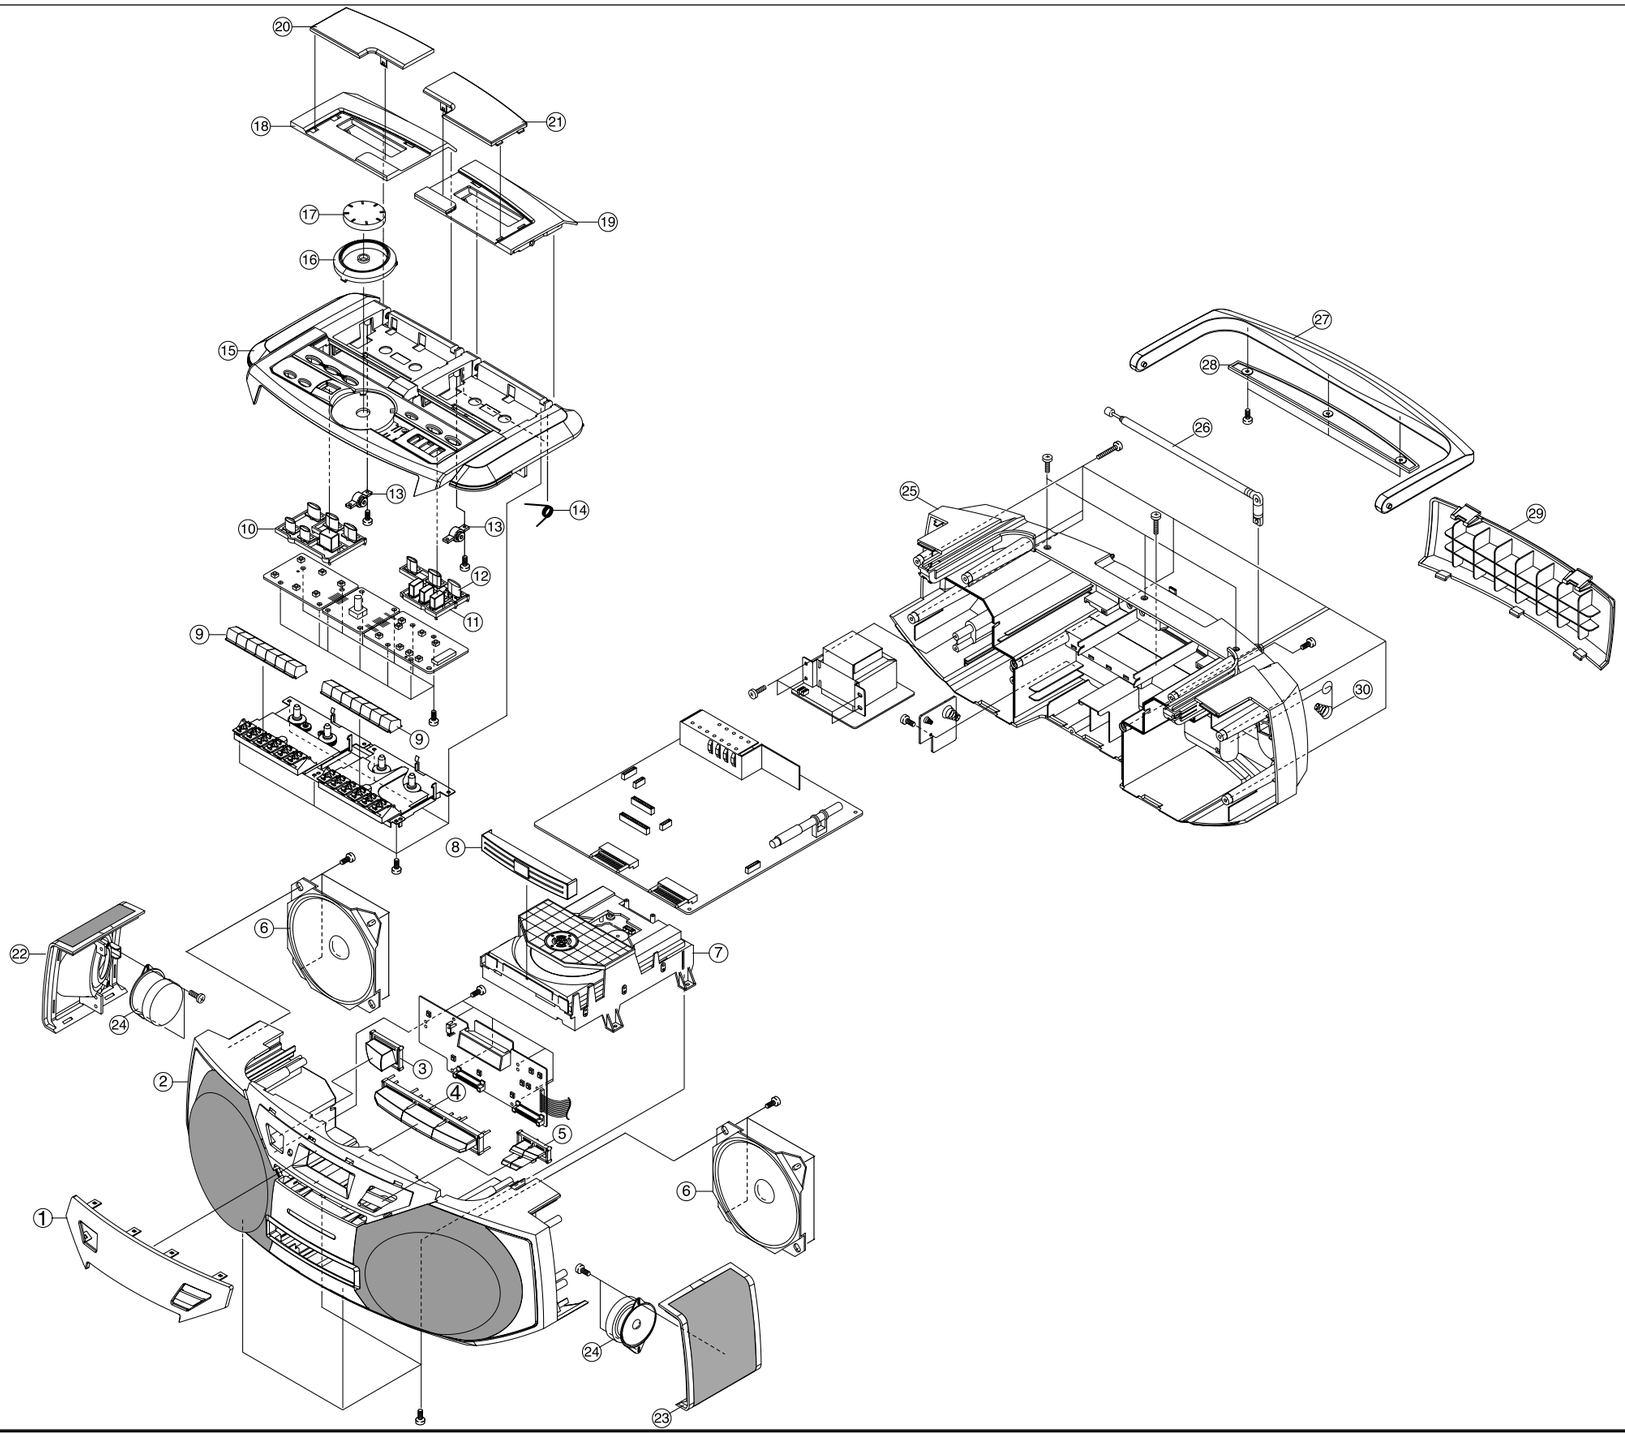

3-2-2 Parts List

No.	Code No.	Description	Specification	Remarks
1	AH64-00845B	WINDOW-LCD	PMMA	
2	AH64-00835B	CABINET-FRONT	HIPS	
3	AH64-00851B	KNOB-POWER	ABS	
4	AH64-00853B	KNOB-CONTROL	ABS	
5	AH64-00852B	KNOB-TIMER	ABS	
6	3001-001177	SPEAKER-WOOFER	7W,4 ohm	
7	G3X8-1CD	CD-PACK		
8	AH64-00840B	DOOR-CD	ABS	
9	AH64-00846C	KNOB-DECK, PLAY A	ABS	
	AH64-00846D	KNOB-DECK, REW	ABS	REWIND
	AH64-00846E	KNOB-DECK, FF	ABS	FAST FORWARD
	AH64-00846F	KNOB-DECK, EJECT/STOP	ABS	EJECT
	AH64-00846G	KNOB-DECK, PAUSE	ABS	PAUSE
	AH64-00846B	KNOB-DECK,REC	ABS	RECORD
	AH64-00846H	KNOB-DECK, PLAY B	ABS	PLAY AUTO-REVERSE
	AH64-00846J	KNOB-DECK, MODE	ABS	MODE
	AH64-00846K	KNOB-DECK, DIR	ABS	DIRECTION
10	AH64-00848B	KNOB-FUNCTION	ABS	
11	AH64-00849B	KNOB-VOLUME	ABS	
12	AH67-00083B	KNOB-SOUND	ABS	
13	AH61-80030A	DAMPER ASSY	POM M0.8	
14	AH61-00289A	SPRING-CASSETTE	SUS304,PI1.0	
15	AH64-00837B	CABINET-TOP	ABS L/GRAY	
16	AH61-00505B	HOLDER-JOG	ABS	
17	AH64-00850B	KNOB-JOG	ABS	
18	AH64-00838B	DOOR-CASSETTE L	ABS	
19	AB64-00839B	DOOR-CASSETTE R	ABS	
20	AH64-00843B	WINDOW-CASS L	PMMA SMOKE	
21	AH64-00844B	WINDOW-CASS R	PMMA SMOKE	
22	AH61-00502B	HOLDER SIDE L	ABS	
23	AH61-00503B	HOLDER SIDE R	ABS	
24	3001-001178	SPEAKER-TWEETER	7W,4 ohm	
25	AH64-00836B	CABINET-BACK	HIPS	
26	4201-001051	ANTENNA-ROD	730mm,210mm	
27	AH64-00842B	HANDLE	ABS	
28	AH63-00209B	COVER-HANDLE	ABS	
29	AH64-00841B	LID-BATTERY	ABS	
30	AH61-00586A	SPRING BATT +-	SUS304,PI1.2	

3-3 CD Deck Exploded View and Parts List

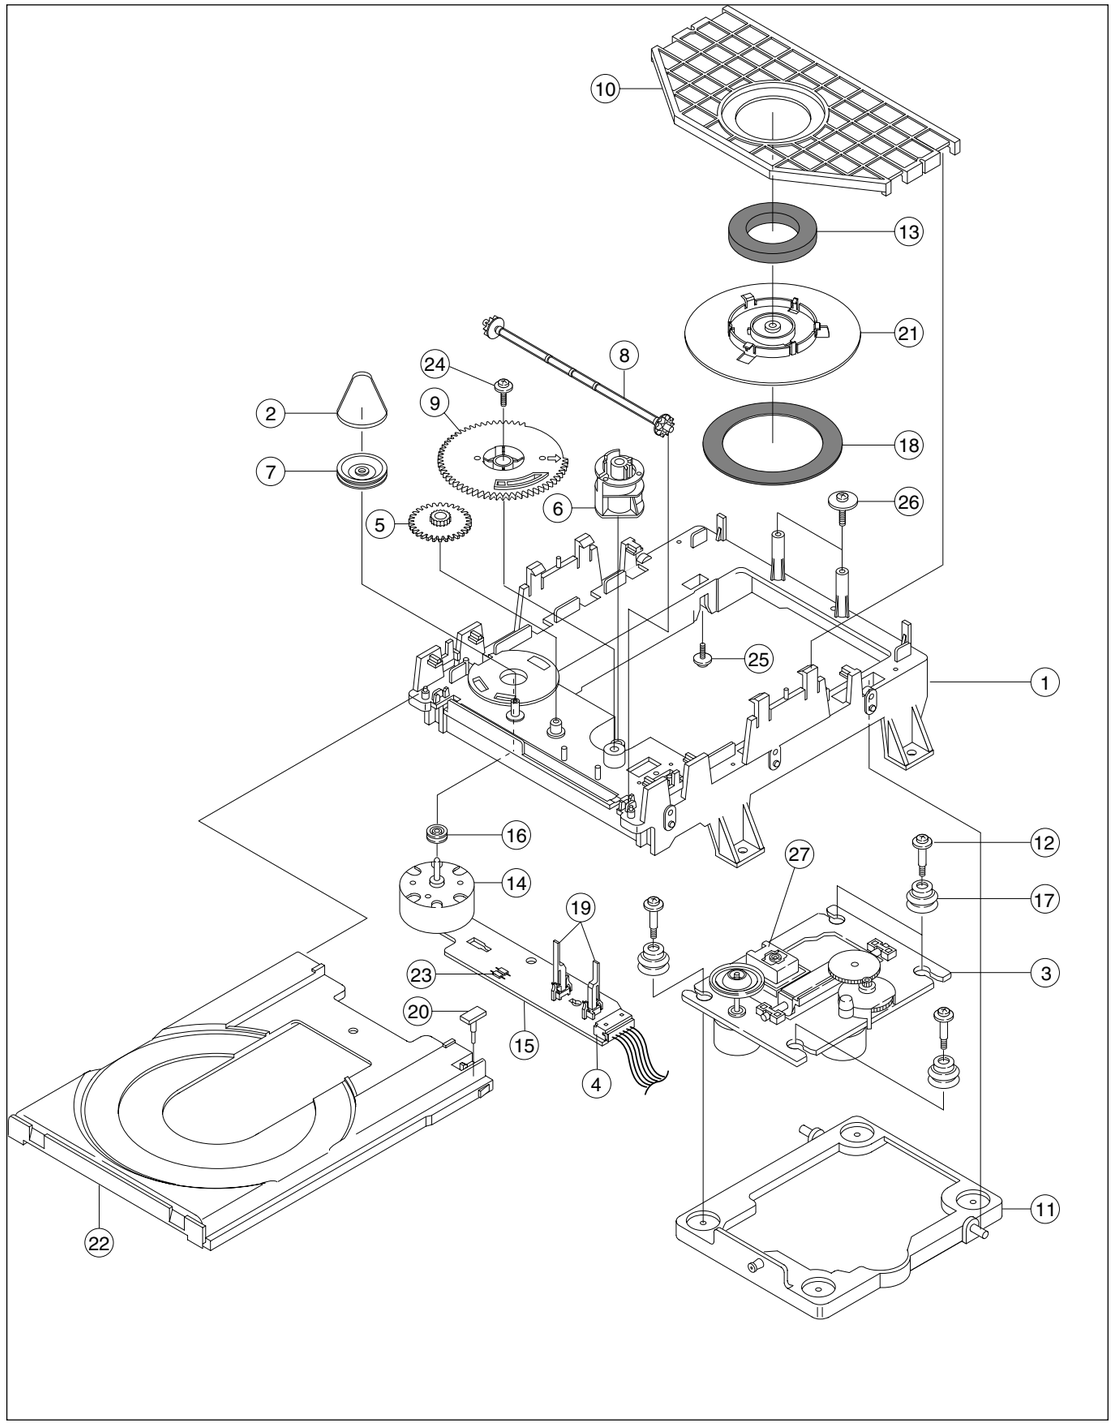

No.	Code No.	Description	Specification	Remarks
1	AH61-20463A	BASE-MAIN	ABS BLK	
2	AH66-60035A	BELT-PULLEY	CR T1.5 BLK	
3	AH59-20004Y	DECK CDP ASS'Y	CMS-P30AM6UD	
4	3711-001061	CONNECTOR-HEADER	BOX 6P 1R 2mm ANGLE SN	
5	AH66-22004A	GEAR	POM BLK	
6	AH66-22001A	GEAR-CAM	POM BLK	
7	AH66-22002A	GEAR-PULLEY	POM BLK	
8	AH66-20196A	GEAR-SYNCHRO	POM BLK	
9	AH66-22003A	GEAR-TRAY	POM BLK	
10	AH61-20464A	HOLDER-CHUCK	ABS+GF20%	
11	AH66-30088A	LEVER-LIFT	ABS+GF20%	
12	AH61-50182A	SHAFT-CD	SCREW TAP TITE	
13	3302-000159	MAGNET-FERRITE	6P FERRITE	
14	AH31-10021A	MOTOR-DC	RF-500TB-12560	
15	AH41-10469A	PCB-SUB	XPC	
16	AH66-10025A	PULLEY-MOTOR	POM BLK	
17	AH73-10012A	RUBBER-CD	SI BLU45	
18	AH63-70081C	SHEET-CHUCK	HYMELON	
19	3409-001010	S/W-LEAF	MIC	
20	AH61-42002A	STOPPER-PIN	POM WHT	
21	AH66-90060A	TABLE-CHUCK	ABS+GF10%	
22	AH66-90059A	TRAY	ABS BLK	
23	0402-000125	DIODE	1N4001 50V 1A	
24	AJ60-10001A	SCREW	TAP TITE PWH M7 L5	
25	AH60-10051A	SCREW	TAP TITE PWH PI12 M3X8	
26	AH60-10107A	SCREW	TAP TITE PWH PI15 M3X12	
27	AJ30-20001B	PICK-UP	SOH-AP	